

Calibration Log

| Date of First Use | Recalibration Date | Notes |
|-------------------|--------------------|-------|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

AlcoHAWK® ABI Quick Guide

Be sure to read the entire owner's manual and follow procedures carefully before using this device.

Operating Instructions

WAIT AT LEAST 20 MINUTES AFTER CONSUMING ALCOHOL OR EATING ANY FOOD BEFORE TAKING A TEST.

If you do not wait 20 minutes before testing, the reading may measure alcohol in the mouth, which does not accurately indicate a subject's blood alcohol level. Additionally, not waiting the required time could damage the sensor and cause all future readings to be inaccurate.

1. Press the **ON/OFF** power switch. The detector will start to count down from 200 to 000 on the DISPLAY. This warm-up process prepares the sensor and circuit for testing.

2. When you hear a **BEEP** and the green **READY** light comes on, take a deep breath, then blow steadily and continuously into the **BREATH PIPE** until you hear another **BEEP**. You will be blowing for up to 5 seconds. Your lips should be sealed around the mouthpiece while blowing. Be careful not to cover the **BREATH OUT** opening on the unit. If you don't blow within 30 seconds, the unit automatically displays "**OFF**". Press the **ON/OFF** power switch to turn the unit off and repeat step 1.

3. After the red and green display lights blink for 4 seconds, the test result will be displayed by 3 digits for 15 seconds. This number is your estimated Blood Alcohol Concentration (%BAC).

- If the BAC reading is over 0.05%, the red **WARN** lamp will flash and you will hear a **BEEP** sound.


- If the BAC reading is over 0.40%, the display will read "**HOT**" and the red **WARN** lamp will flash and you will hear a **BEEP** sound. This can also occur if a subject blows alcohol from their saliva into the tester.

- If you have consumed only a trace level of alcohol, your actual concentration may be below 0.01%BAC (Blood Alcohol Concentration), and the reading may not be activated. However, the display will show 0.00%.

- If the unit displays ErH, see the Error Messages section in the manual.

4. Finally, the unit will display "**OFF**" for turn-off and make a **BEEP** sound. Press the **ON/OFF** power switch to turn the unit off.

5. For subsequent testing, repeat steps 1 – 4. Space tests at least 2 minutes apart.

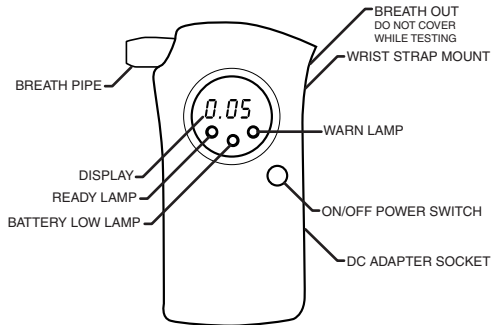

DO NOT DRINK ALCOHOL AND DRIVE

SEE OWNER'S MANUAL FOR HELP UNDERSTANDING THE RESULTS, PRECAUTIONS AND RE-CALIBRATION INSTRUCTIONS FOR RE-CALIBRATION THAT MUST BE ROUTINELY PERFORMED.

THIS DEVICE IS INTENDED TO MEASURE ALCOHOL IN THE HUMAN BREATH.