

Calibration Log

Date of First Use	Recalibration Date	Notes

AlcoHAWK® PRO Quick Guide

Be sure to read the entire owner's manual before use and follow procedures carefully to obtain accurate results.

Operating Instructions

BE SURE TO **WAIT AT LEAST 20 MINUTES** AFTER CONSUMING ALCOHOL OR EATING ANY FOOD BEFORE TAKING A TEST.

If you do not wait 20 minutes before testing, the reading will measure alcohol in the mouth, which does not accurately indicate a subject's blood alcohol level. Additionally, not waiting the required time could damage the sensor and cause all future readings to be inaccurate.

1. Press the **ON/OFF** power switch. The detector will start to count down from 200 to 000 on the **DISPLAY**. This warm-up process prepares the sensor and circuit for testing.

2. When you hear a **BEEP** and the green **READY** light comes on, take a deep breath, then blow steadily and continuously into the **BREATH PIPE** until you hear another **BEEP**. You will be blowing for up to 5 seconds. Your lips should be sealed around the mouthpiece while blowing. Be careful not to cover the **BREATH OUT** opening on the unit. If you don't blow within 30 seconds, the unit automatically displays "**OFF**". Press the **ON/OFF** power switch to turn the unit off and repeat step 1.

3. After the red and green display lights blink for 4 seconds, the test result will be displayed by 3 digits for 15 seconds. This number is your Blood Alcohol Concentration (%BAC).

- If the BAC reading is over 0.05%, the red **WARN** lamp will flash and you will hear a **BEEP** sound.


- If the BAC reading is over 0.40%, the display will read "**HOT**" and the red **WARN** lamp will flash and you will hear a **BEEP** sound. This can also occur if a subject blows alcohol from their saliva into the tester.

- If you have consumed only a trace level of alcohol, your actual concentration may be below 0.01%BAC (Blood Alcohol Concentration), and the reading may not be activated. However, the display will show 0.00%.

- If the unit displays ErH, see the Error Messages section in the manual.

4. Finally, the unit will display "**OFF**" for turn-off and make a **BEEP** sound. Press the **ON/OFF** power switch to turn the unit off.

5. For subsequent testing, repeat steps 1 – 4. Space tests at least 2 minutes apart.

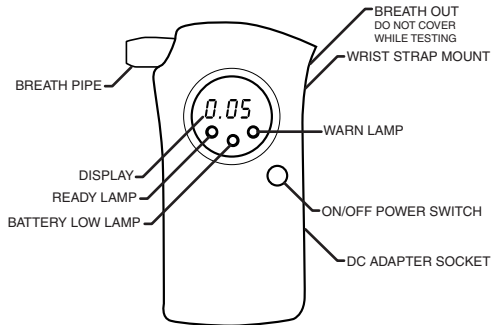

DO NOT DRINK ALCOHOL AND DRIVE

SEE OWNER'S MANUAL FOR HELP UNDERSTANDING THE RESULTS, PRECAUTIONS AND RE-CALIBRATION INSTRUCTIONS THAT MUST BE PERFORMED ONCE EVERY 6-12 MONTHS.

THIS DEVICE IS INTENDED TO MEASURE ALCOHOL IN THE HUMAN BREATH.